



# Assembly Instructions

## Hardwood Locker Bench Kits

with Pedestals


Before you begin, please make sure all parts and proper quantities are included. (See Part Identifier Key) Any parts damaged during shipment must be reported within 24 hours of receipt. To report information regarding damages or if you have any questions, please call 800.242.2303.

### Step 1:

- Use (3) 1/4" x 1.25" Hex Lag Bolts and (3) 1/4" flat washers to attach each pedestal to the bottom of the hardwood locker bench top. There will be pre-drilled holes in the top to guide you where the pedestals should be placed.
- Repeat with the remaining pedestals.

### Step 2:

- Hardware to attach pedestal to the floor is not included. Installer will need to determine type of hardware that is needed.

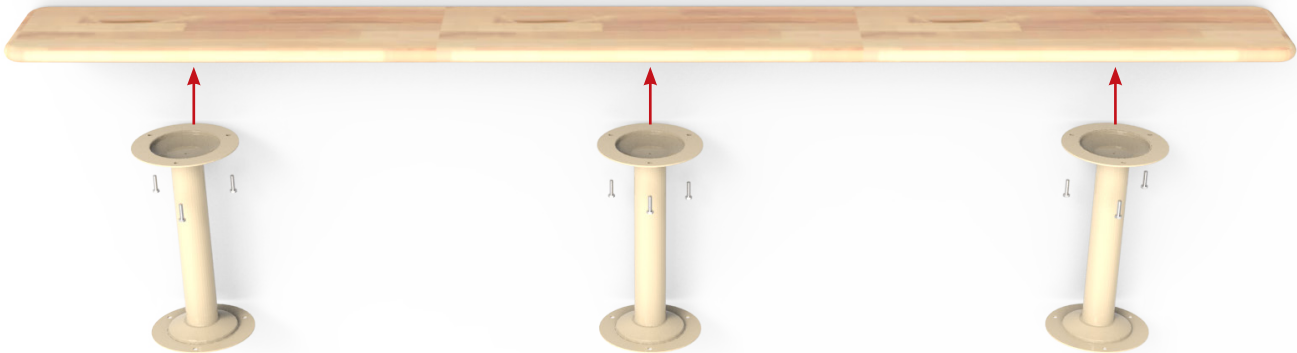

## Part Identifier Key

Part #	Description	Qty.
0406835	Almond Locker Bench Pedestal	Depends on length of top
0401303	Stainless Steel Locker Bench Pedestal	Depends on length of top
Hardware Pack	1/4" Flat Washer (Used to attach Pedestal to Hardwood Bench)	Depends on length of top
	1/4" x 1.25" Hex Lag Bolt (Used to attach Pedestal to Hardwood Bench)	Depends on length of top

### Tools Required

- Socket wrench
- 7/16" socket